GPRS ERROR CODES	
04	No GPRS level (wrong APN, username or password or no
	GPRS coverage) or not a GPRS data SIM card
010/03	SIM card not inserted or SIM card not ready
011	PIN code requested (PIN code has to be deactivated)
012	SIM card blocked => PUK code requested
013	Defective SIM card
014	SIM card busy
015	Error on SIM card
016	Incorrect password (PIN code has to be deactivated)
017	PIN2 code requested (PIN code has to be deactivated)
018	PUK2 code requested
022	SIM card not found
030	No GPRS coverage or not a GPRS data SIM card
043	Authenfication failure on the GPRS network : (Wrong APN,
	username or password or No GPRS coverage or GPRS
	service not activated on the SIM)
040 to 047	GPRS service not activated on the SIM or SIM blocked (use
	the PUK to unblock)
107	Data GPRS service not authorized (SIM not adapted)
132	SIM card not activated (contact your provider)
149	Authenfication error (Network problem or incorrect
	parameters APN, username)